

Kisan Newton 3

Change mode by pressing top upper left button.

MIX MODE: Deposit Processing

Machine will count mixed denomination notes and display the denomination and value total.

1. Place bank notes mixed on the hopper.
2. Machine will count all the different US denominations.
3. Machine will display the "total amount" in US dollars and pieces, then display each denomination "piece count and value". Depending on set up it can display by denomination data in both piece and value or simple total amount of count.

AUTO MODE: Denomination Detection

Machine identifies the first note counted and sets that denomination as the standard note. Only notes of that denomination are counted. All other denominations are rejected without stopping.

1. Place bank notes on the hopper. The unit will automatically start counting.
2. Machine will display the "amount" in US dollars, and the "piece count" of the denomination being counted.
3. The bank notes of the denomination counted first are counted. All other denominations are rejected uncounted.

FREE MODE:

Free mode is for counting pieces of documents with no value, authenticity or scan during the counting process.

To enter free count mode, you simply press the mode button until the desired setting displays "Free". To return to value modes press the mode button until the desired mode of operation is displayed.

TO CHANGE BATCH PIECE COUNT:

Press the (start) key to bring you to the main display. Press the batch button quickly through the preset options for batch settings. Press and hold the batch key to enter custom batch settings. From the displayed keyboard enter the custom batch and press start/stop to accept.

Add Mode Enable: Press the (start) key to bring you to the main display. On the front right group of buttons press Add key to enable or disable. At the top center of the screen a "+" will be bright white background and will be greyed out when disabled.

ADD OFF:

Whenever next transaction starts, previous data is cleared.

ADD ON:

Will display the count and then once counted notes are removed it will displays a running total of accumulated counts and amount.

Face and Orient Bills

To set the machine to face, orient or direction press and hold the Mode key. The setting will appear on the screen. By pressing the desired setting for face, orient or direction then press start/stop to accept. Press start/stop again to return to the main screen.

By pressing and hold the mode key again then press the option again to disable the setting. Press start/stop again to return to the main screen.

Print function

If your discriminator is equipped with a printer to utilize you have options in set up on how the printer will react.

It can be used in a manual format; where currency is counted and at completion simply press print or it can be set to auto-print.



KISAN
AMERICA, INC.

Kisan Newton 3

Start/Stop Button

- Is used to start/stop the counting process.
- Is used as a backspace function.
- Is used to reset and clear jam path.
- Upon completed count press count screen to retrieve denomination breakdown.

Mode Button

- Is used to select the mode of operation and configuration.
- short press toggles through Modes available.
- Auto – Mix – Free
- Long press accesses mode settings- See user manual for settings and configuration instructions.

Batch Button

- Button pressed short: The batch value scrolls through pre-configured batch settings. (10 – 20 – 50 – 100 – 150 – 200)
 - Button pressed long: The batch configuration screen will show up to be custom configured.
- See User Manual for details.

Data Button

- Button is pressed short:
Gives access to count totals
Count results - Count history - serial #

Print

- The print key is used to request a print. A single press at the completion of a count will provide a print detail of the counted notes.
- Through the menu set ups the print command can be enabled to print automatically upon the removal of the counted currency from the lower stacker.

↵ Set

- Is used to change denomination if in DENOM mode.
- Also used to navigate selections in the set up menu's.

↵ Add

- Is used to enable or disable add mode. The boxed plus symbol on the top center displays bright when enabled and is greyed out when disabled.
- Also used to navigate selections in the set up menu's.

C Key

- Is used to clear count or cancel action when using the set-up menu items.



KISAN
AMERICA, INC.